 




0434132
Lonati LA04E7 LA10P6-7 Socks Machine Backlit Bule Display

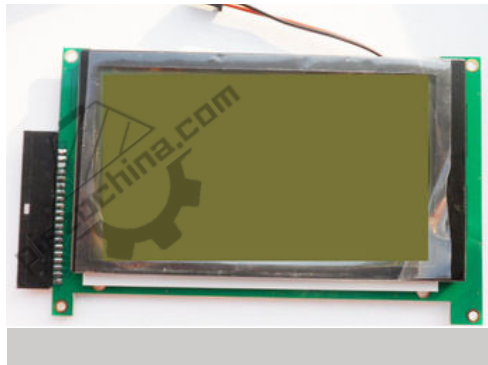

 
0434123
Lonati Goal Series L454J L472J Socks Machine



0434122
Lonati Displays



0434112
Lonati LA08MJ Socks Machine Color Display

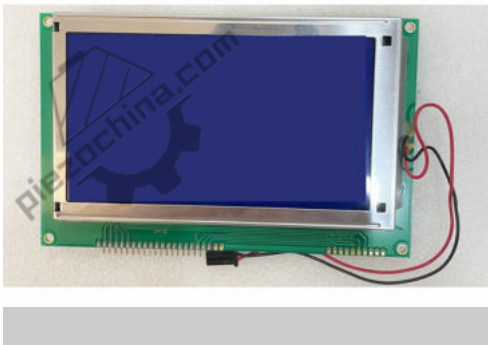

0434092
Lonati G615L U9-953 U9-954 Socks Machine Blue Display Screen




0434042
Lonati L411P-7 Hosiery Machine Use Display




LM24014
Lonati LCD Display LM24014 Compatible For South Korea Boo Seong Socks Machine



 
0436042
Lonati L454 L454J Hosiery Machine Use Display Screen

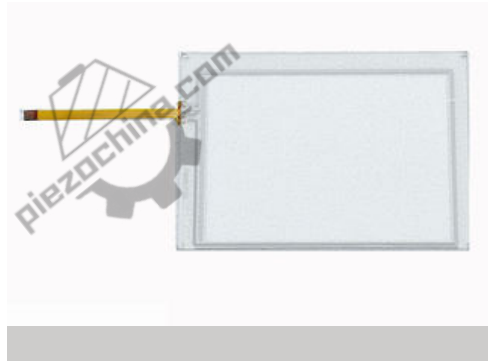

11980390-11
Lonati | Rumi touch display

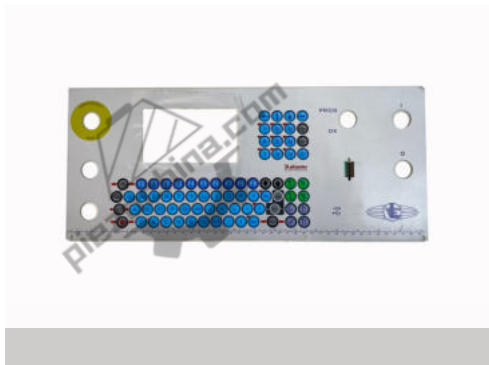 

 
0439392
Lonati G615 G54 Year 2007 Sock Machine

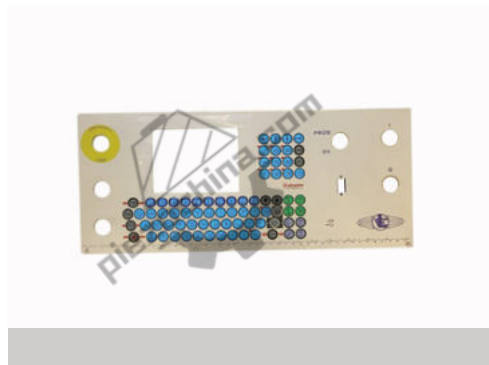


0439463
Lonati Goal Series G615 G615L Socks Machine



 0430997
Lonati Goal Series G724 G744 Man Socks Machine

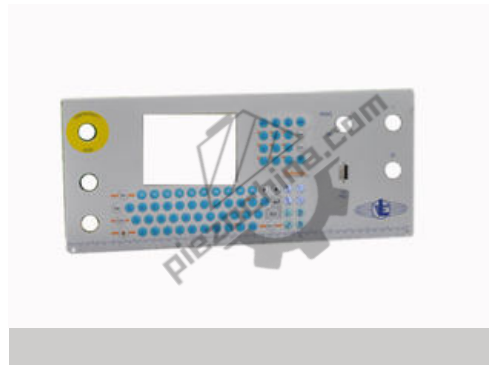

0439384
Lonati keyboards

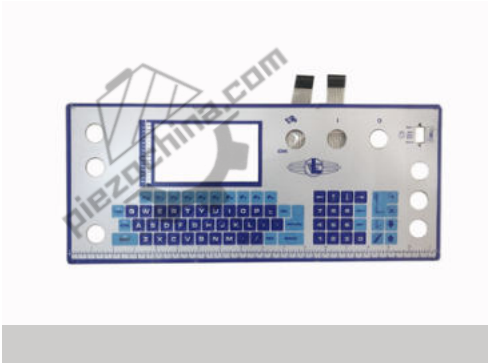 


0430046 0430996
Lonati Goal Series G54JL Socks Machine



0430042
Lonati L500 L501 L510 Socks Machine



 0430041
Lonati L411P-7 Hosiery Machine

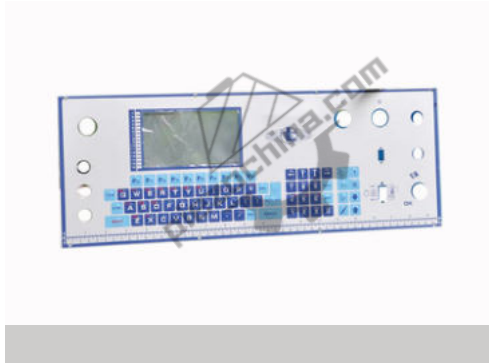

80430028
Lonati Keyboards



0430026
Lonati Keyboard



 
0430019
Lonati L462 L472K Socks 1998-2000 Year Machine




0430018
Lonati Keyboards




0430016
Lonati Goal Series L454 L462J I472k Machine

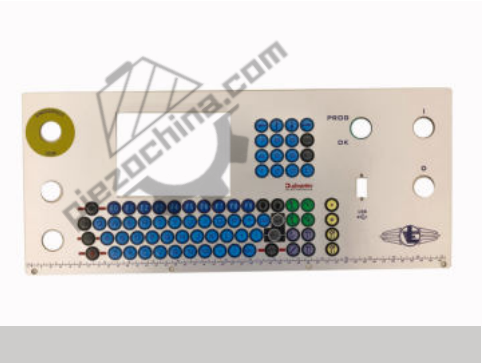

0439497
Lonati LA02MJ LA04MJ

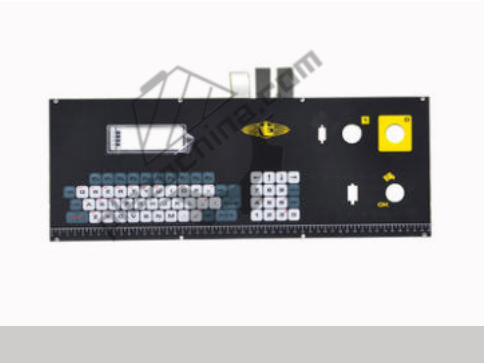 

0430014
Lonati Keyboards

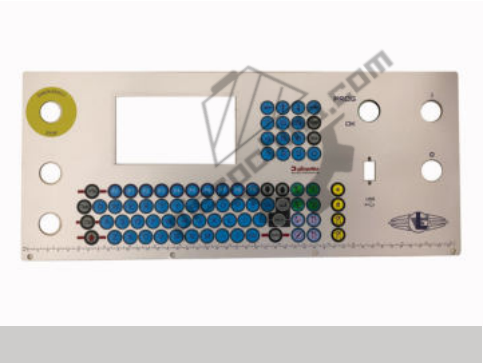 

0439496
Lonati Goal Socks Machine GL61Q GL615